




### Icon Custom Shelf Instructions.

(Note : There are only 2 types of shelf : Fader Unit and Main Unit. The Main is the longer piece and matches the back of the Main Unit of D-Control).

- Step 1 : Remove 5/64” Hex screws from back grill plate(s) of Icon. Save all screws.  
Make note of which is top of grill and bottom when removing grill plate.  
Be careful not to strip these, they are sensitive little buggers!
- Step 2 : Count **10 or 11 holes** (not 8 in picture) down from the top of grill – this is where the top holes of the shelf should go to make sure the shelf is level when you re-attach it. If you have a Fader Main Fader configuration then mount the Left side as far to the right of the panel so it is flush with the right side. (on a DControl that has a center Main unit) Mount the main shelf unit so there is about 4 holes in on each side. Mount the right unit so that it is flush to the far left of the panel – that way the gaps between the faders and the main unit should be small.
- Step 3 : Insert provided 6-32 Phillips machine screws and external lock washers through the 8<sup>th</sup> row and bottom row to attach the Shelf to the grill plate. 6 Total for Fader Pack shelf and 8 Total for Main Unit.
- Step 4 : Re-Attach the Grill plate and shelf to the Icon. Be careful to have someone help support the shelf as you thread in several of the hex screws. Also be watchful to not cross thread any hex screws.
- Repeat Steps 1 through 4 for each of the shelf pieces.

*Your shelf is rated for **UP TO 25 POUNDS**. This means up to a 24” LCD panel and or a smaller near field monitor like a Yamaha NS10. Proceed at your own risk beyond that.*

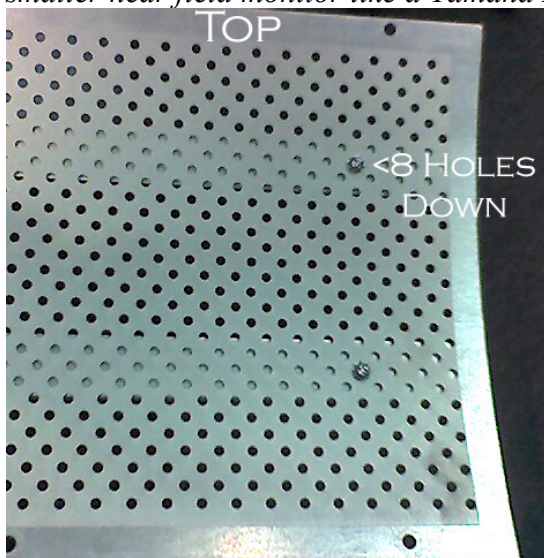

(Figure 1)

Call 626-441-7771 for help.